# INSTRUCTION

L56-60824-A4



## Wiring Instruciton

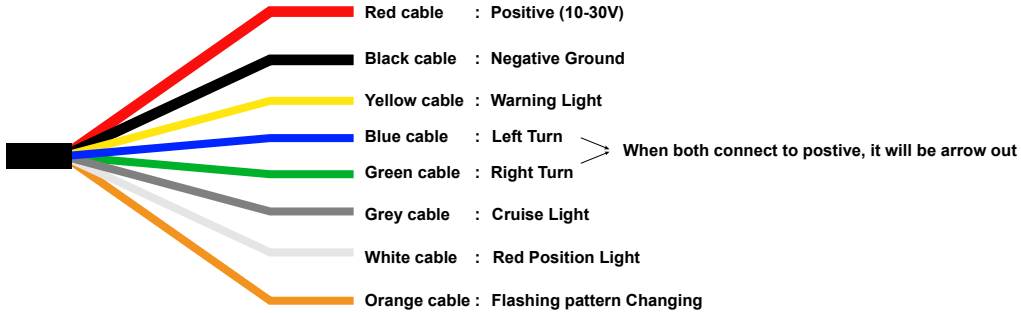


**Side brack and middle bracket are both included in the package**



- **Only a qualified auto-electrician should install this product. Do Not install this product if unsure.**
- **Failure to use specified installation parts or hardware will void the product warranty.**
- **For this product to operate at optimum efficiency, a good electrical connection to ground must be made.**
- **Do not install and/or operate this safety product unless you have read and understand the safety information contained in this manual.**



| Flash patterns | | FPM | 1 Cycle |
|---|---|---|---|
| 1 | Single Flash | 150 | 400MS |
| 2 | Single Flash (50%) | 150 | 400MS |
| 3 | Double Flash | 150 | 400MS |
| 4 | Double Flash (50%) | 75 | 800MS |
| 5 | Triple Flash | 75 | 800MS |
| 6 | Quintuple Flash | 150 | 400MS |
| 7 | Slow Single Flash | 150 | 400MS |
| 8 | Two adjacent groups flash alternately | 75 | 800MS |
| 9 | Left and Right 3 Flash alternately | 75 | 800MS |
| 10 | Left and Right 5 Flash alternately | 75 | 800MS |
| 11 | Left Steady Burn (40%), Right Quintuple Flash | 500 | 120MS |
| 12 | Right Steady Burn (40%), Left Quintuple Flash | 400 | 150MS |
| 13 | Turn Left | 500 | 120MS |
| 14 | Arrow Out | | |
| 15 | Turn Right | | |
| 16 | Cruise (Steady Burn) | | |

- FPM means how many cycles in a minute

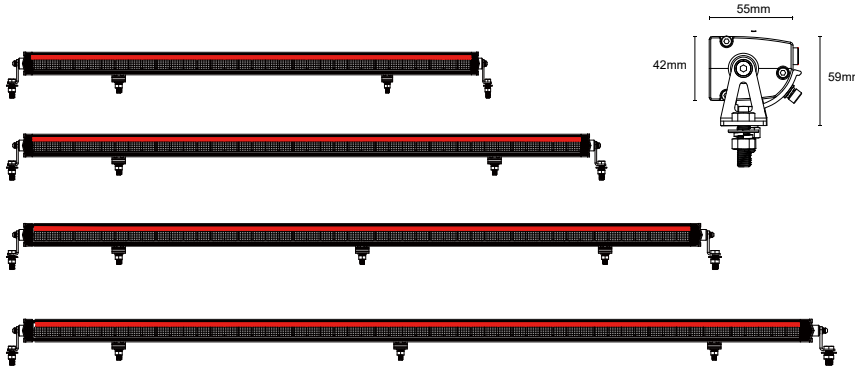


**IMPORTANT! THIS UNIT IS A SAFETY DEVICE, AND IT MUST BE CONNECTED TO ITS OWN SEPARATE, FUSED POWER POINT TO ASSURE ITS CONTINUED OPERATION WHEN ANY OTHER ELECTRICAL ACCESSORY FAIL.**

# INSTRUCTION

L56-60824-A4

## Size Option

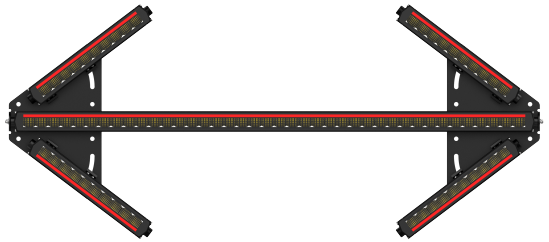

43inch / 1080mm

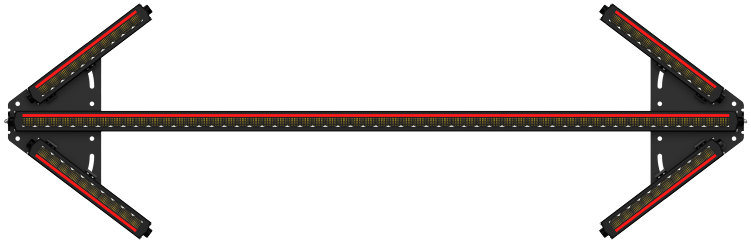

56inch / 1430mm

## Wiring Instruciton

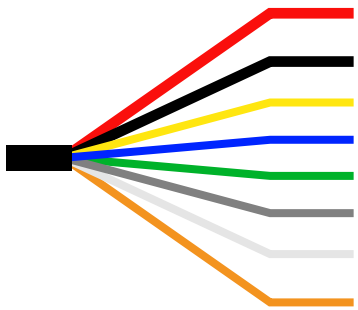

Red cable : Positive (10-30V)

Black cable : Negative Ground

Yellow cable : Warning Light

Blue cable : Left Turn

Green cable : Right Turn

When both connect to postive, it will be arrow out

Grey cable : Cruise Light

White cable : Red Position Light

Orange cable : Flashing pattern Changing
(+) Momentarily touch + for next pattern



| Flash patterns | | FPM | 1 Cycle |
|---|---|---|---|
| 1 | Single Flash | 150 | 400MS |
| 2 | Single Flash (50%) | 150 | 400MS |
| 3 | Double Flash | 150 | 400MS |
| 4 | Double Flash (50%) | 75 | 800MS |
| 5 | Triple Flash | 75 | 800MS |
| 6 | Quintuple Flash | 150 | 400MS |
| 7 | Slow Single Flash | 150 | 400MS |
| 8 | Two adjacent groups flash alternately | 75 | 800MS |
| 9 | Left and Right 3 Flash alternately | 75 | 800MS |
| 10 | Left and Right 5 Flash alternately | 75 | 800MS |
| 11 | Left Steady Burn (40%), Right Quintuple Flash | 500 | 120MS |
| 12 | Right Steady Burn (40%), Left Quintuple Flash | 400 | 150MS |
| 13 | Turn Left | 500 | 120MS |
| 14 | Arrow Out | | |
| 15 | Turn Right | | |
| 16 | Cruise (Steady Burn) | | |

- FPM means how many cycles in a minute



- **Only a qualified auto-electrician should install this product. Do Not install this product if unsure.**
- **Failure to use specified installation parts or hardware will void the product warranty.**
- **For this product to operate at optimum efficiency, a good electrical connection to ground must be made.**
- **Do not install and/or operate this safety product unless you have read and understand the safety information contained in this manual.**

**IMPORTANT! THIS UNIT IS A SAFETY DEVICE, AND IT MUST BE CONNECTED TO ITS OWN SEPARATE, FUSED POWER POINT TO ASSURE ITS CONTINUED OPERATION WHEN ANY OTHER ELECTRICAL ACCESSORY FAIL.**